
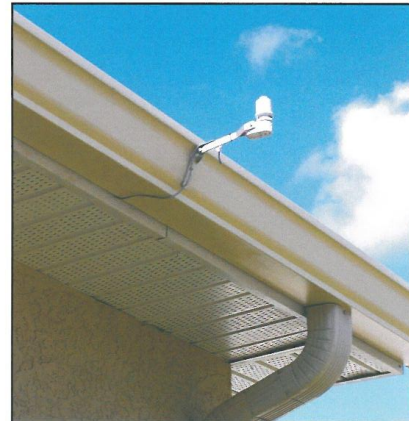




DO IT YOURSELF RAIN SENSOR CHECKUP

Florida Law (Section 373.62 F.S.) requires that sprinkler systems have functioning devices, such as rain sensors, to inhibit or interrupt the operation of the system during periods of sufficient moisture. To ensure proper operation, sensors should be checked at least once a year. These instructions are specifically for a cork-disc sensor.

1. You will need to have access to the rain sensor, which is typically located on the roofline or top of a fence post.
2. Turn on the time clock for the zone nearest the sensor.
3. Press and hold down the  button on top of the sensor. The zone should shut off.
4. Release the button and the zone should come back on. If it does, the sensor is operating properly.
5. If the system does not shut off or come back on, check for wiring problems. The device may have to be repaired or replaced. The instruction manual or manufacturer's website for your specific device should be consulted for more information. An irrigation contractor may have to be consulted.



DO YOUR PART TO SAVE A DROP!